Diamond & Gemstone

TITAN GER - 500

0

WWW.GERDETECT.DE

(OK)

52

0


SHOP DETECTORS TEL : +1 206-401-9788 WEB : https://shopdetectors.com/ EMAIL : contact@shopdetectors.com

GERMAN INDUSTRY WWW.GERDETECT.DE





English User Manual

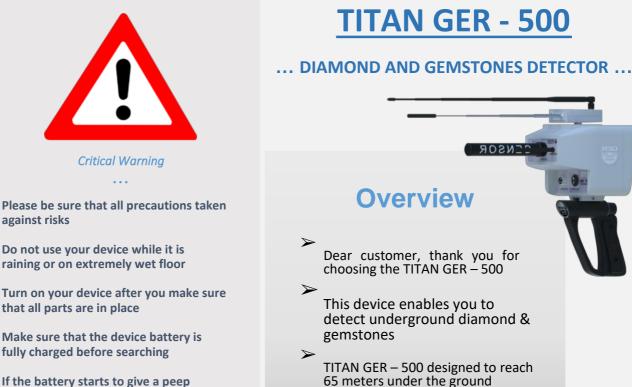

 \succ and 3000 meters front range

- \succ Works by long range system to confirm your target
- \triangleright and identify the target underground and its depth

Be aware of high voltage resources, and do not use any charger other than the original charger that come with the device

Main unit of the device is under warranty against all electronic breakdowns for two (2) years

Any damages caused by user errors (laying open the main unit, hits, harms etc.) are not within this warranty

Battery and antenna are also not within this warranty You should follow the instructions in this user manual strictly to minimize the faults and to use your device correctly

Make sure that the device battery is fully charged before searching

Do not use your device while it is

raining or on extremely wet floor

that all parts are in place

against risks

Critical Warning . . .

If the battery starts to give a peep sound, close the device and recharge the battery

Do not start the pulse induction system without connecting the coil cable to the device, other ways the device will stop in the middle of opening

It is recommended to read the user manual before start working on the device to understand everything and to avoid mistakes doing the search

After the device start make sound and turn off automatically put the battery on charge and do not try to start the device without charging the battery



1



The Long-Range System

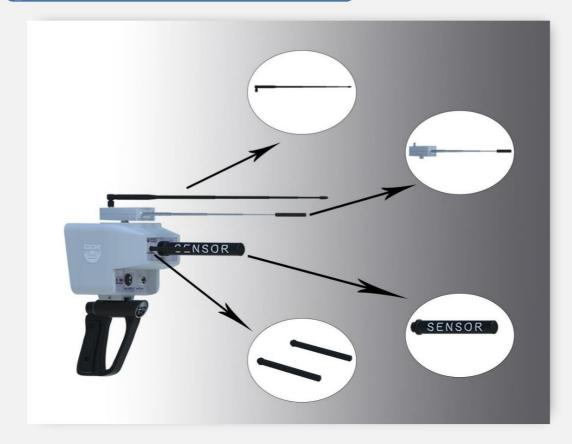


Figure (1) the long-range system components

This system specializes to cover vast areas and locate the target within 1-meter Square up to depths of 65 meters below the surface of the ground and Front Range up to 3,000 square meters.







English User Manual

Connect the signal boosting sensor



Figure (2) boosting sensor



Figure (3): Transmitter antennas



Figure (4): Signal Recipient

Connect the transmitter antennas

Connect the Signal Recipient



- Connect the battery cable and

Switch the device

through ON / OFF button



Connect the Recipient Antenna



Figure (4): Recipient Antenna



Figure (5): (ON / OFF) button





Figure (6): languages list

Click on the screen of the device to display the languages list the device works on four languages:

(GERMAN - ENGLISH - FRENCH - SPANISH - ITALIAN - ARABIC)



Settings menu (Sound Adjustment – brightness adjustment, and the device information)





Figure (9): Front Range Options

After selecting the language, you want to work in (English for example)

The target types menu will appear, choose the target type to be search for from a list of options through pressing on the type name,

(big diamond for example)



You can flick through these lists with the NEXT button

It's got a list containing a wider range of gemstones, which are **18** different kinds.

www.gerdetect.de

DIAMOND AND GEMSTONES






Select the type of soil desired in the search area: (natural - clay - rocky - sandy - mixed - mineralized).

www.gerdetect.de

TITAN GER - 500

DIAMOND AND GEMSTONES



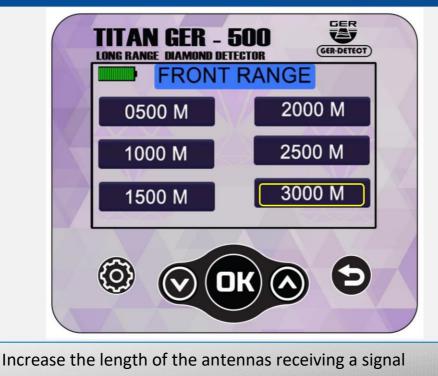

To able the device to detects targets even to 3000 meters



After selecting the Front Range, the digital compass will appear, Fix the device at a 90-degree angle for the compass to work properly, then Press the "Skip" button on the screen or the "OK" button on the keyboard.





Figure (10): search screen

After pressing on skip button, the light signals will appear directly on the screen confirming that the device is sending and receiving signals that guide you directly towards the target.

When a signal is captured, the device will immediately turn around towards the target.

On the smart screen, there will appear the direction of the detected target alongside a beep at the location of the target.



Figure (11): Increasing the length of the antennas







After detecting the target, confirm the target from four directions


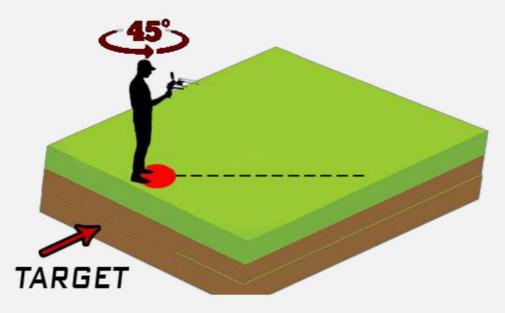


Figure (14): determine the depth

To determine the depth of the discovered target, stand above target and turn 45 degrees

Walk straight ahead until the antenna reverse to the back



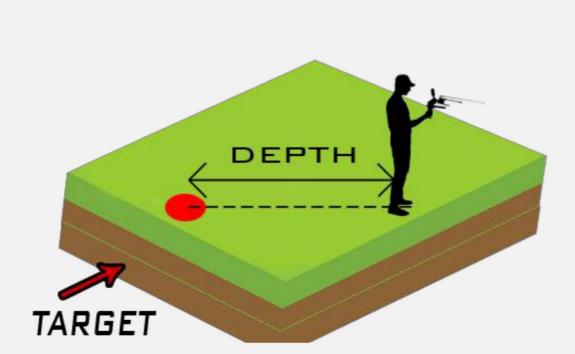

Measure the distance between the antennas reversing back and the target center point.

The distance between the antennas reversing back and the center point is equal the target depth

For example, if the distance is **3** m the depth of the target is **3**.

Note: The target must be buried underground for many years so that by the time and interaction with the soil's composition, an ionic field will be formed which will help prospectors to detect the target.

Therefore, testing the device on diamonds or gemstones laid on the ground or newly buried under the ground will not show the real capacity and functionality of this device to detect the target or to reach larger depths.

The reason for that is that the ionic fields are radiations from diamonds or gemstones that have been in the ground for a long time and have intersected and interacted with the soil and the nature of the earth as well as having been regulated with magnetic fields north and south – These features do not actualize in diamonds or gemstones when they exist on the ground or newly buried.




Warning

 $\mathbf{\Lambda}$

SHOP DETECTORS TEL : +1 206-401-9788 WEB : https://shopdetectors.com/ EMAIL : contact@shopdetectors.com

If you want the device work well without errors you have to follow next steps

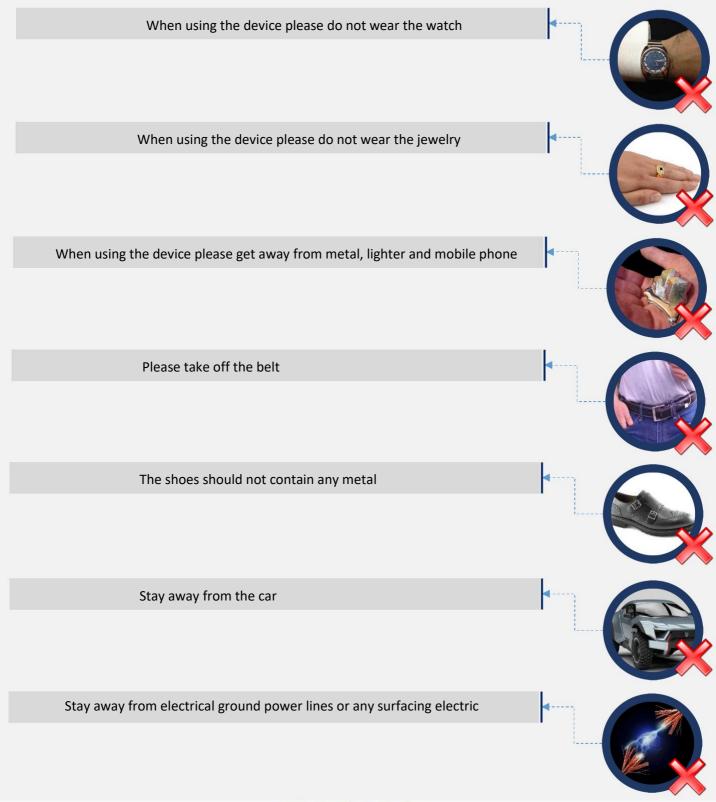

www.gerdetect.de

TITAN GER - 500

DIAMOND AND GEMSTONES