



Getting Started Guide
دليل بدء التشغيل
Guia de Introdução
guide de prise en main

SHOP DETECTORS
TEL : +1 206-401-9788
WEB : <https://shopdetectors.com/>
EMAIL : contact@shopdetectors.com

1000 GOLD MONSTER

Australia & Asia Pacific
+61 8 8238 0888
minelab@minelab.com.au

Europe & Russia
+353 21 423 2352
minelab@minelab.ie

Middle East & Africa
+971 4 254 9995
minelab@minelab.ae


North, South & Central America
+1 630 401 8150
info@minelabamericas.com

4901-0226-4
this equipment.
By Minelab Electronics could void the user's authority to operate
this equipment.

OPERATING FREQUENCY
The detector is configured to operate at a fundamental
operating frequency of 45 KHz.

WARRANTY TERMS
This product has a 2 year limited warranty from the time of
purchase. Please refer to www.minelab.com for further warranty
information. Register this product online at register.minelab.com
The product est garantié de 2 ans à partir de la date de son achat. Pour
plus d'informations sur la garantie, veuillez consulter le site www.minelab.com.
Enregistrer ce produit en ligne sur le site register.minelab.com.
Este produto tem um limite de garantia de 2 anos a partir da data de
sua compra. Consulte em www.minelab.com para obter maiores
informações sobre a garantia. Registre este produto online em
register.minelab.com.

COMPLIANCE
Information to the User (FCC Part 15, 105)
NOTE: Class B Devices
This equipment has been tested and found to comply with the limits
for a Class digital device, pursuant to part 15 of the FCC Rules. These
limits are designed to provide reasonable protection against harmful
interference in a residential installation.

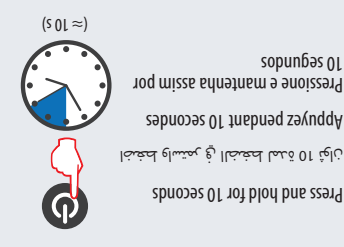

Factory Reset
إعادة ضبط المصنع
Re-initialiser les réglages d'usine
Configurar de fábrica

Control Panel | لوحة التحكم | Panneau de commande | Pannel de controle

1 Iron / حديد / Ferro

Low gold chance / احتمالية ذهب منخفضة

Faible probabilité d'Or / Baixa probabilidade de ouro

High gold chance / احتمالية ذهب مرتفعة

Forte probabilité d'Or / Alta possibilidade de ouro

8 Gold (Iron Reject) / ذهب (رفض الحديد)

Or (discrimination des ferreux) / Ouro (Rejeição ao ferro)

Deep All-Metal / عميق كل المعادن

Profond Tous Métaux / Todos os Metais Profundos

9 Quick Ground Balance Long Press | ميزان أرضي سريع ضغطة طويلة | Equilibre au sol rapide Appui Long | 快速地面平衡 长按 | Balanço Rápido do Solo Longa Impresa

3 Sensitivity Adjust (1-10)

4 Auto Sensitivity (11)

5 Auto + Sensitivity (12)

7 Volume Adjust (1-6)

8 Detect Mode

9 Ground Balance

10 Power

Quick Start | التشغيل السريع | Démarrage rapide | Início rápido

1 Turn On / تشغيل الجهاز / Mise en route / Ligar

2 Auto noise cancel / الإلغاء الأوتوماتيكي للضوضاء / Élimination automatique des interférences / Cancelamento de ruído automático

3 Begin gold detecting / ابدء البحث عن الذهب / Commencer à détecter de l'or / Iniciar a detecção de ouro

- | | | | |
|--|---|--|---|
| <p>EN</p> <ol style="list-style-type: none"> Gold Chance Indicator Battery Level Sensitivity Adjust (1-10) Auto Sensitivity (11) Auto + Sensitivity (12) Error Indicator Volume Adjust (1-6) Detect Mode Ground Balance Power | <p>AR</p> <ol style="list-style-type: none"> مؤشر احتمالية الذهب مستوى شحن البطارية ضبط حساسية (1-10) حساسية أوتوماتيكية (11) حساسية + أوتوماتيكية (12) مؤشر الأخطاء ضبط شدة الصوت (1-6) اسلوب الكشف توازن الأرض التشغيل | <p>FR</p> <ol style="list-style-type: none"> Indicateur de probabilité d'or Niveau de charge batteries Réglage de la sensibilité (1-10) Sensibilité automatique (11) Sensibilité + automatique (12) Indicateur d'erreur Réglage du volume (1-6) Mode de détection Équilibre au sol Marche/Arrêt | <p>PT</p> <ol style="list-style-type: none"> Indicador de Oportunidade de Ouro Nível de bateria Ajuste de sensibilidade (1-10) Sensibilidade automática (11) Sensibilidade + automática (12) Indicador de erro Ajuste do volume (1-6) Modo de detecção Balanço Terrestre Ligar |
|--|---|--|---|

Assembly


التجميع

Montage

Montagem


1

Screw mid, lower & upper shafts together
اربط القضيب الأوسط والسفلي والعلوي سوياً
Vissez les manches inférieur, intermédiaire et supérieur ensemble
Aparafuse as hastas intermediária, inferior e superior juntas

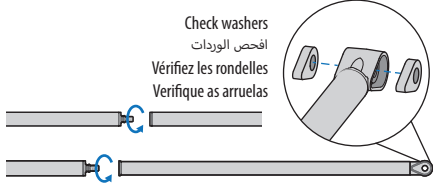


2

Attach lower shaft to coil
قم بتثبيت القضيب السفلي في الملف
Reliez le manche inférieur à la tête de détection
Fixe a haste na bobina

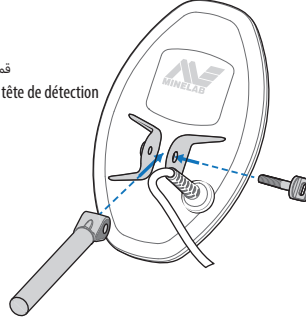


3

Attach control box to upper shaft
قم بتثبيت صندوق التحكم في القضيب العلوي
Reliez le boîtier de commande au manche supérieur
Fixe a caixa de controle na haste superior

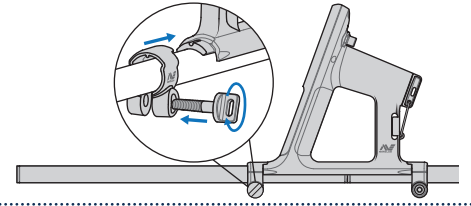


4

Attach armrest to upper shaft
قم بتثبيت مسند الذراع في القضيب العلوي
Reliez le repose bras aumanche supérieur
Fixe o apoio de braço na haste superior

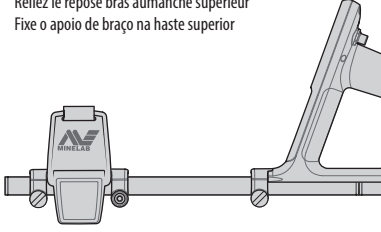


5

Wrap cable around shaft & connect to control box
قم بلف الكابل حول القضيب وتوصيله بصندوق التحكم
Enroulez le câble autour du manche et connectez-le au boîtier de commande
Enrole o cabo em torno da haste e conecte-o à caixa de controle

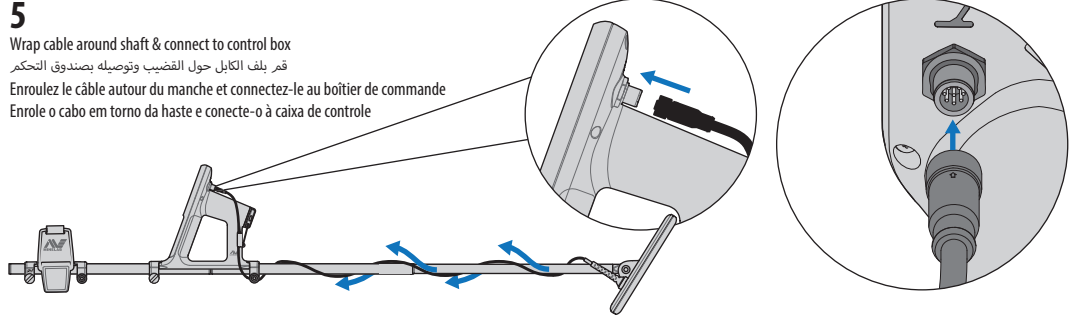


6

Insert batteries
قم بتثبيت البطاريات
Insérez les piles
Insira as baterias

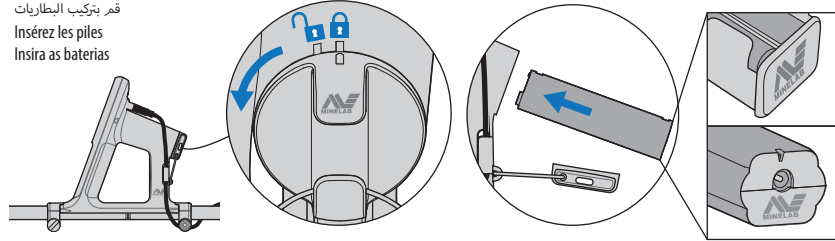

Connect headphones
قم بتوصيل سماعة الرأس
Connectez le casque audio
Conecte os fones de ouvido

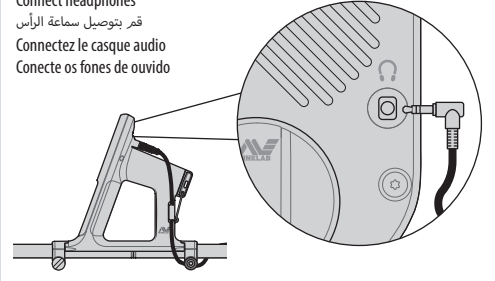


Universal Shaft Adaptor Embout de manche universel

وصلة عصي الحمل الشاملة Adaptador Universal da Haste

Detecting Basics Fondamentaux de la détection

مبادئ الكشف عن المعادن Detecção Básica

Alternative plastic shaft or broomstick
قضيب بلاستيكي بديل أو عصا مكنسة
Possibilité de manche en plastique ou de manche à balai
Haste de plástico opcional ou cabo de madeira

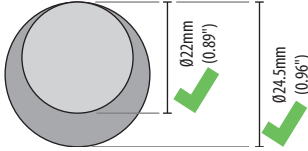

1

Insert shaft into yoke
ركب القضيب في القارية
Insérez la manche dans l'embout
Insira a haste no encaixe

Check washers
افحص الوردات
Vérifiez les rondelles
Verifique as aruelas



2

Follow steps 2-6 of Assembly
اتبع الخطوات 2-6 من خطوات التجميع
Suivez les étapes 2 à 6 du montage
Siga as etapas de 2 a 6 para a Montagem



Battery Charging Chargement des batteries

شحن البطارية Carregar a bateria

