

GOld Hunter

METAL DETECTOR



SHOP DETECTORS
TEL : +1 206-401-9788
WEB : <https://shopdetectors.com/>
EMAIL : contact@shopdetectors.com

GERMAN INDUSTRY
WWW.GERDETECT.DE



Critical Warning



Please be sure that all precautions are taken against risks

Do not use your device while it is raining or on an extremely wet floor

Turn on your device after you make sure that all parts are in place

Make sure that the device battery is fully charged before searching

If the battery starts to give a beep sound, close the device and recharge the battery

It is recommended to read the user manual before starting working on the device to understand everything and to avoid mistakes while doing the search

After the device starts make sound and turn off automatically put the battery on charge and do not try to start the device without charging the battery

Be aware of high voltage resources, and do not use any charger other than the original charger that comes with the device.

Main unit of the device is under warranty against all electronic breakdowns for two (2) years

Any damages caused by user errors (laying open the main unit, hits, harms etc.) are not within this warranty

Battery and antenna are also not within this warranty

You should follow the instructions in this user manual strictly to minimize the faults and to use your device correctly

GOLD HUNTER GOLD AND METAL DETECTOR



Overview


- Dear customer, thank you for choosing GOLD HUNTER DEVICE.
- This product enables you to detect the presence of gold & diamond & gemstones.
- GOLD HUNTER designed to help you discover GOLD, DIAMOND, GEMSTONES
- In addition, it can confirm your target and identify the type underground with the depth.



THE DEVICE SYSTEM AND WORK STEPS


1

THE LONG-RANGE SYSTEM

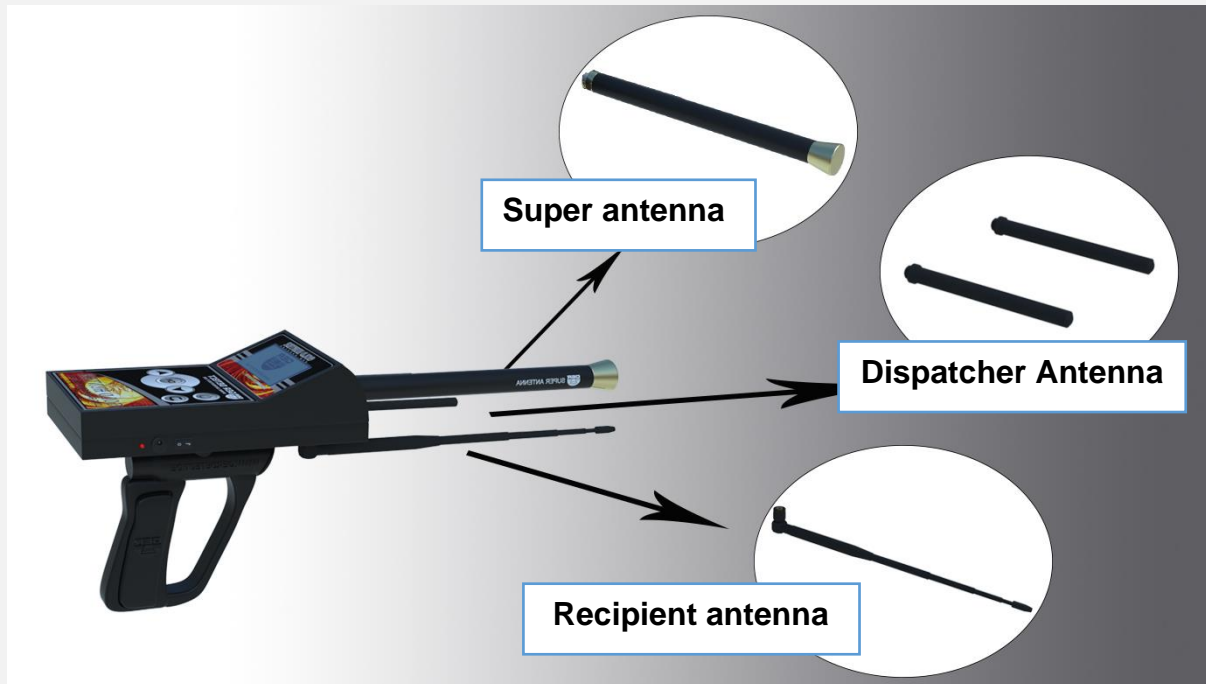

This system specializes to cover vast areas and locate the target within **1** meter Square and depths up to 35 meters below the surface of the ground and Front Range up to 2,000 meters.

CONNECT THE LONG RANGE PARTS TO THE DEVICE

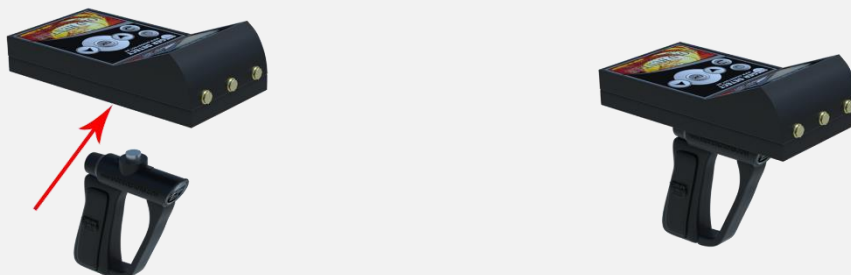

CONNECT THE HANDLE TO THE DEVICE



CONNECT THE SIGNAL TRANSMITTER



CONNECT THE SUPPER ANTENNA




CONNECT THE SIGNAL RECIPIENT

The explorer must stand facing from north to south, which is the best way to search for gold and hidden treasures underground.

If no signal is obtained, change the direction from east to west and from west to east and from south to north.

Upon obtaining a signal, the antenna will circumvent the target directly

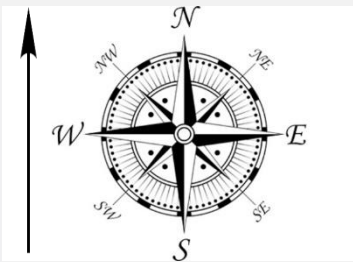

SWITCH ON THE DEVICE THROUGH THE (ON/OFF)



THE BATTERY LED: THIS LED WILL TURN ON
WHEN THE BATTERY CHARGE RUN OUT

THE DEVICE WORKS IN FOUR LANGUAGES
(GERMAN-ENGLISH-FRENCH-ARABIC)



After selecting the language (**English** for example).

You have to select **TARGET TYPE** (**GOLD NATURAL** for example)

Choose the Front Range according to the area you want to reach you can select between

(0500-1000 -1500 -2000)M



After selecting the Front Range, the search screen will appear which contain an indicator, which will start to move, and the device will start to issue a peep sound, which is the signal.

Transmitter conforming means that the device works correctly.




When you reach the target, the device will turn back.

That means you just pass the target; you will stop and point the target in 1 M square.



Increase the length of the signal recipient antennas to enable the device to detect the target even to 2000 meters.

After detecting the target, confirm the target from four directions.

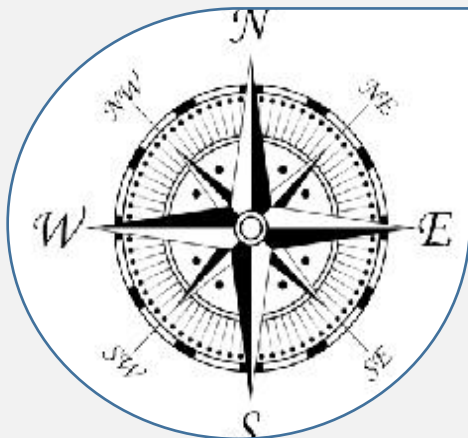

NORTH TO SOUTH


SOUTH TO NORTH


EAST TO WEST

WEST TO EAST

To determine the depth of the discovered target, stand above the target and turn **45 degrees angle to the right or left**.


Walk straight ahead until the antenna reverses back.

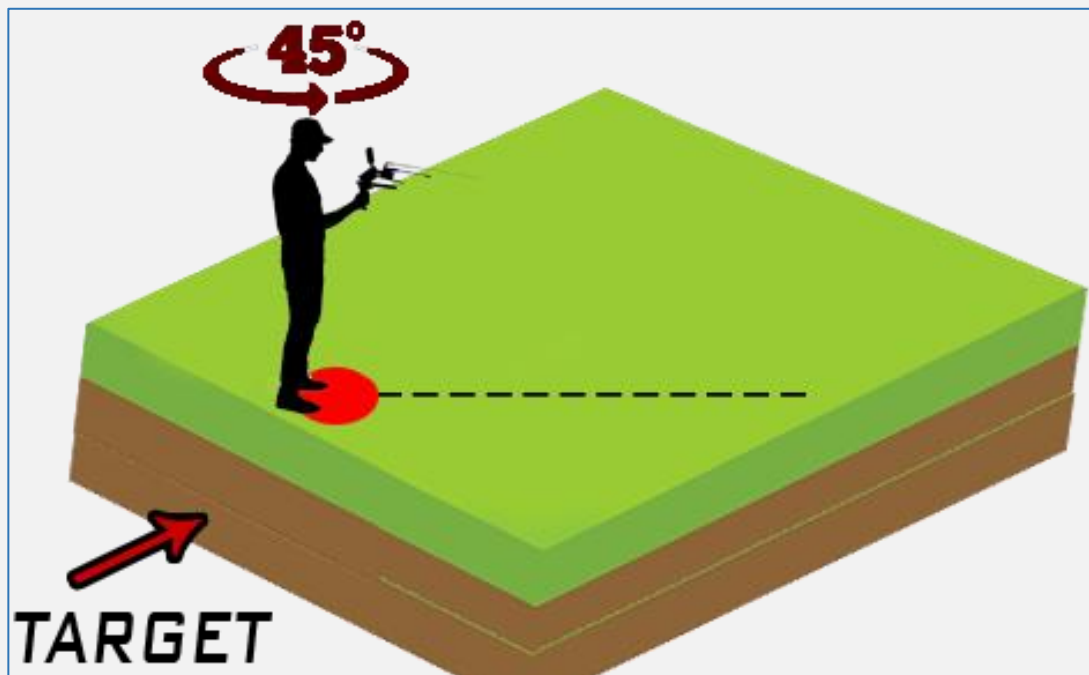

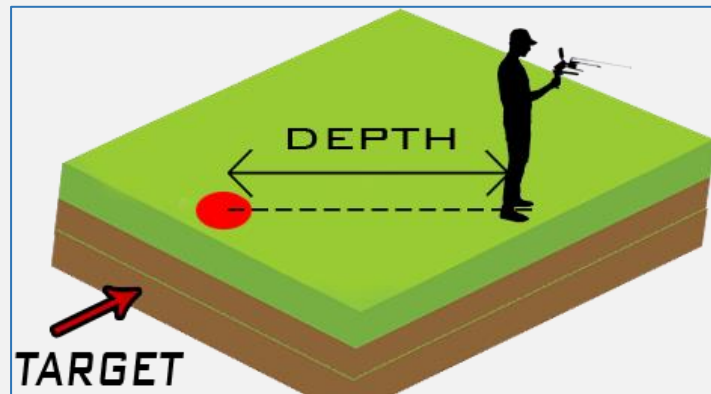

Measure the distance between the antennas reversing back and the target center point.

The distance between the antennas reversing back and the center point is equal to the target depth for example, if the distance is **10 m** the depth of the target is **10 m**.

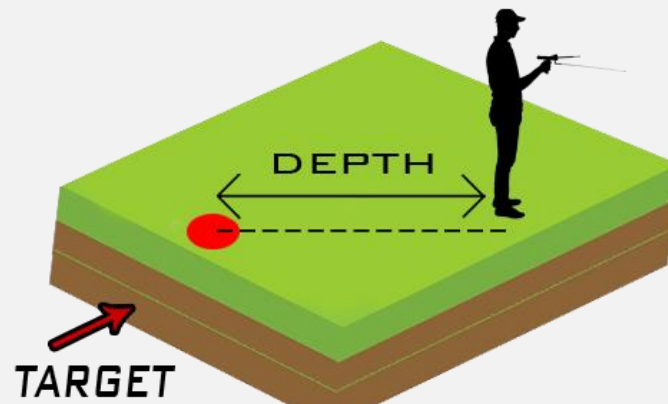

Note: The target must be buried underground for many years so that by the time and interaction with the soil's composition, an ionic field will be formed which will help prospectors to detect the target.

Therefore, testing the device on metals laid on the ground or newly buried under the ground will not show the real capacity and functionality of this device to detect the target or to reach larger depths.

The reason for that is that the ionic fields are radiations from gold and other metals that have been in the ground for a long time and have intersected and interacted with the soil and the nature of the earth as well as having been regulated with magnetic fields north and south – These features do not actualize in gold and other metals when they exist on the ground or newly buried.



SHOP DETECTORS
TEL : +1 206-401-9788
WEB : <https://shopdetectors.com/>
EMAIL : contact@shopdetectors.com

If you want the device to work well without errors you have to follow the next steps.

When using the device please do not wear the watch



When using the device please do not wear the jewelry



When using the device please get away from metal, lighter and mobile phone



Please take off the belt



The shoes should not contain any metal



Stay away from the car



Stay away from electrical ground power lines or any surfacing electric



Thanks for choosing
our products



We wish you the best
of luck in your