

SHOP DETECTORS
TEL : +1 206-401-9788
WEB : <https://shopdetectors.com/>
EMAIL : contact@shopdetectors.com

Diamond Hunter

DIAMOND & GEMSTONES DETECTOR



GERMAN INDUSTRY
WWW.GERDETECT.DE

www.gerdetect.de



Critical Warning

...

Please be sure that all precautions taken against risks

Do not use your device while it is raining or on extremely wet floor

Turn on your device after you make sure that all parts are in place

Make sure that the device battery is fully charged before searching

If the battery starts to give a peep sound, close the device and recharge the battery

It is recommended to read the user manual before start working on the device to understand everything and to avoid mistakes doing the search

After the device start make sound and turn off automatically put the battery on charge and do not try to start the device without charging the battery

DIAMON HUNTER

... DIAMOND & GEMSTONES
... DETECTOR



Overview

- Dear customer,
- Thank you for choosing DAIMON HUNTER DEVICE.
- This product enables you to detect the presence of underground diamond & gems.
- DAIMON HUNTER designed to help you discover DIAMOND & GEMSTONES.
- In addition, it can confirm your target and identify the type underground with the depth.

Be aware of high voltage resources, and do not use any charger other than the original charger that come with the device

Main unit of the device is under warranty against all electronic breakdowns for two (2) years

Any damages caused by user errors (laying open the main unit, hits, harms etc.) are not within this warranty


Battery and antenna are also not within this warranty

You should follow the instructions in this user manual strictly to minimize the faults and to use your device correctly

THE DEVICE SYSTEM AND WORK STEPS


1

THE LONG-RANGE SYSTEM

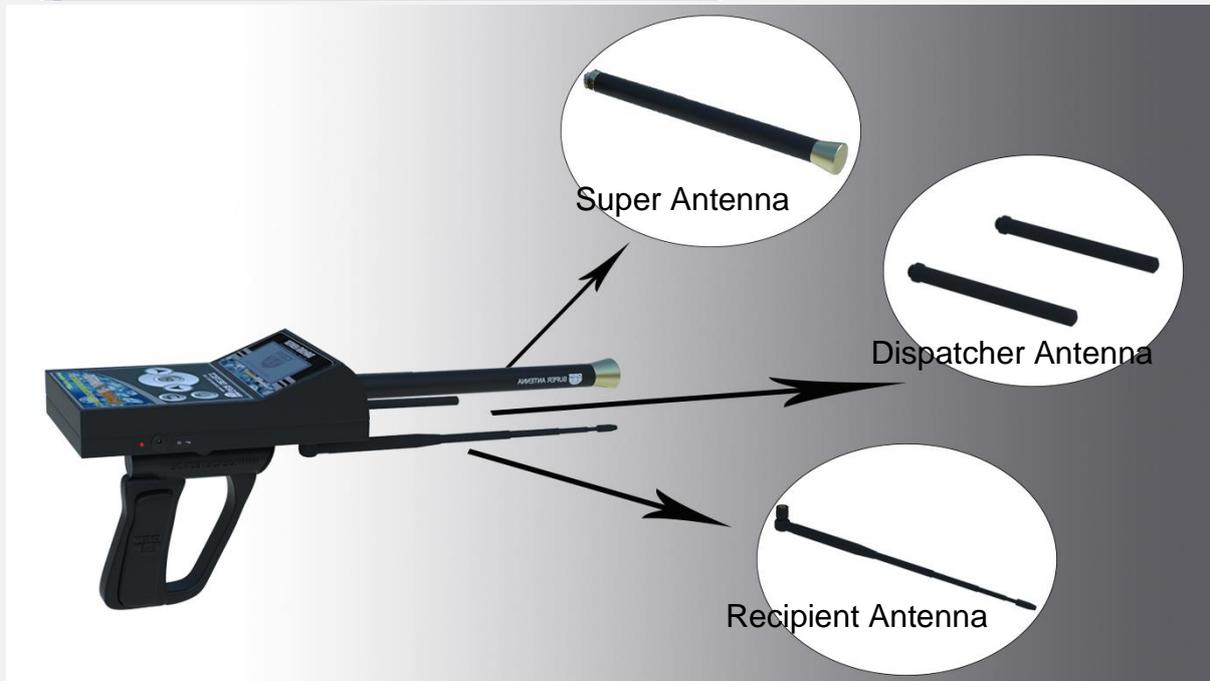


This system specializes to cover vast areas and locate the target with in **1** meter Square and depths up to 35 meters below the surface of the ground and Front Range up to 2,000 meters.

CONNECT THE LONG-RANGE PARTS TO THE DEVICE

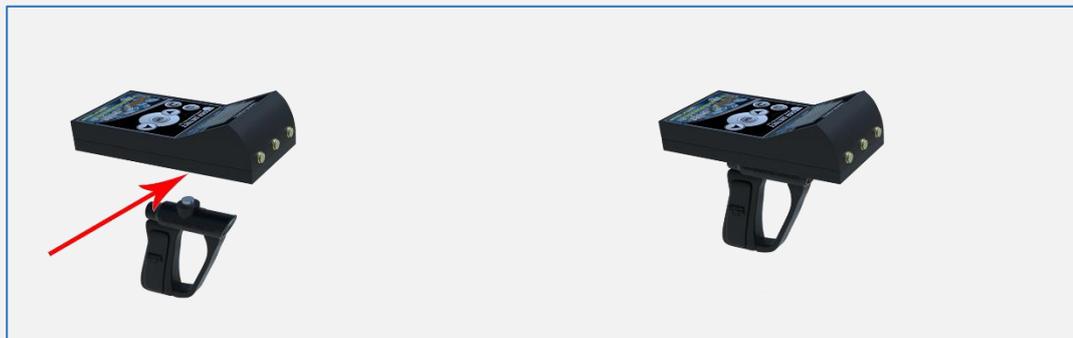

CONNECT THE HANDLE TO THE DEVICE

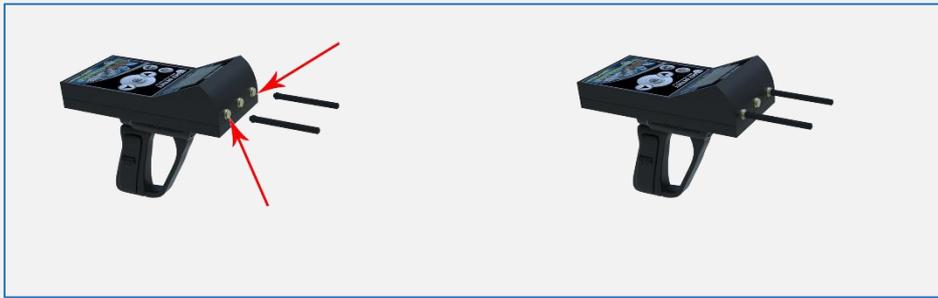

CONNECT THE SIGNAL TRANSMITTER



CONNECT THE SUPER ANTENNA



CONNECT THE SIGNAL RECIPIENT




TURN ON THE DEVICE THROUGH THE ON/OFF BUTTON

The explorer must stand facing from north to south, which is the best way to search for underground DIAMOND AND GEMSTONES.

If no signal is obtained, change the direction from east to west and from west to east and from south to north.

Upon obtaining a signal, the antenna will circumvent the target directly

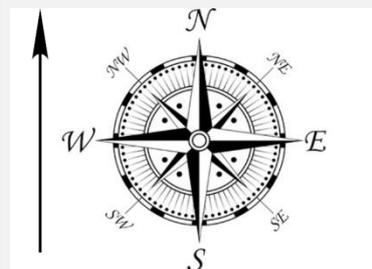

THE DEVICE WORKS ON FOUR LANGUAGES

(GERMAN-ENGLISH-FRENCH-ARABIC)



After selecting the language, you want to work in (**English** for example)

You have to select **TARGET TYPE, FOR EXAMPLE (Large Diamond)**

Choose the Front Range according to the area you want to reach You can select between

(0500-1000 -1500 -2000) M



After selecting the Front Range, the search screen will appear which contain an indicator, which will start to move, and the device will start to issue a pep sound, which is the signal

Transmitter conforming that is the device work correctly




Increase the length of the signal recipient antennas to enable the device to detect the target even to 2000 meters



When you will reach the target, the device will turn to the back

That means that you just past the target you will stop and point the target in 1 M square

After detecting the target, conform the target from four directions

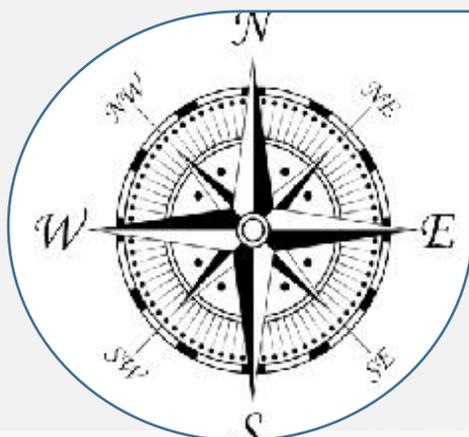

NORTH TO SOUTH


SOUTH TO NORTH

EAST TO WEST

WEST TO EAST

To determine the depth of the discovered target, stand above target and turn **45 degrees**


Walk straight ahead until the antenna reverse to the back

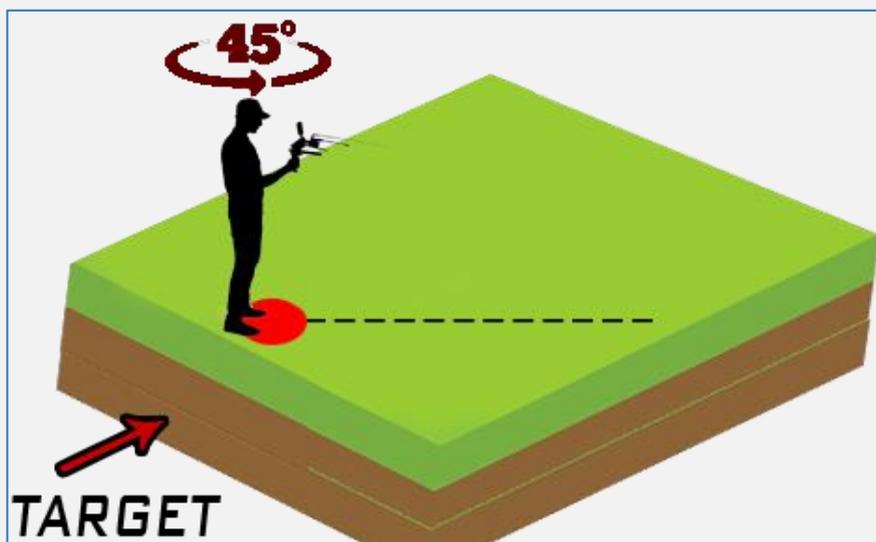

Measure the distance between the antennas reversing back and the target center point.

The distance between the antennas reversing back and the center point is equal the target depth

For **example**, if the distance is **10 m** the depth of the target is **10**.

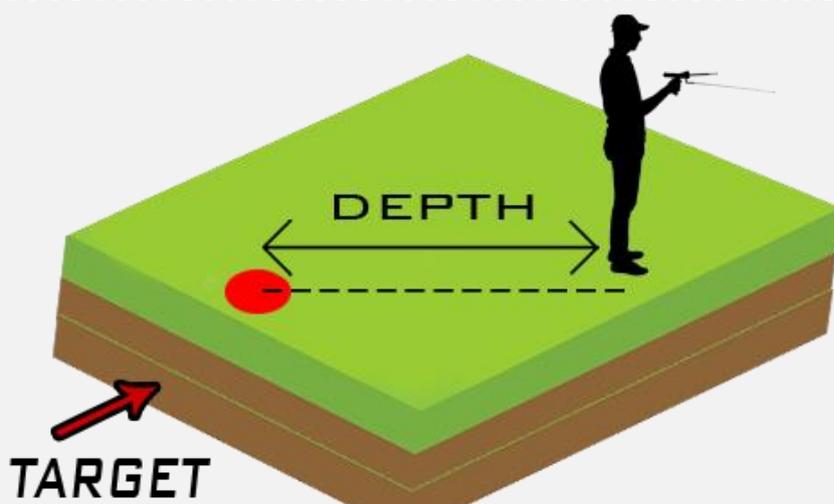

Thanks for choosing
our products



We wish you the best
of luck in your

www.gerdetect.de



If you want the device work well without errors you have to follow next steps

SHOP DETECTORS

TEL : +1 206-401-9788

WEB : <https://shopdetectors.com/>

EMAIL : contact@shopdetectors.com

When using the device please do not wear the watch



When using the device please do not wear the jewelry



When using the device please get away from metal, lighter and mobile phone



Please take off the belt



The shoes should not contain any metal



Stay away from the car



Stay away from electrical ground power lines or any surfacing electric

